

### SYCLONE PORTABLE GAMMA-RAY SPECTROMETER

Svclone

The SYCLONE is a highly sensitive handheld Gamma-Ray spectrometer capable of identifying single or multiple isotopes simultaneously. The SYCLONE also provides the user with various functions such as Search and Find, optional Neutron Detection, Nuclide ID, Dose Rates and accumulated Dose Rate.

- Large isotope library
- Lightweight with longer battery life
- RadView software for integration
- Large backlight display
- Automatic energy stabilization (no check source required)
- Easy to follow menus
- Large internal memory

# SYCLONE

# PORTABLE GAMMA-RAY SPECTROMETER (WITH OPTIONAL NEUTRON DETECTION)

## Detect and identify specific radioactive isotopes in a sample

The SYCLONE Gamma-Ray spectrometer utilizes the highest quality Thallium doped Sodium lodide crystal, combined with an integral high signal-to-noise ratio PMT and state-of-the-art electronics and embedded micro controller firmware. All of these enhanced features allow the SYCLONE to be one of the most accurate portable Gamma-Ray spectrometers when it comes to identifying specific and/or multiple isotopes even with weak gamma sources. The mechanical assembly of the SYCLONE is robust and designed for field applications where harsh environments are commonplace.

## **Simplified and Flexible**

The SYCLONE operating system utilizes sensible easy to read and follow menus. The multi-position joystick and large LCD backlit display provides easy navigation through menu selections. Detailed spectral information is clearly and precisely displayed so knowledgeable users have the ability to visually identify peaks in the histogram. Various on-screen messages assist the user when immediate attention is required for issues such as preset timing, high radiation levels, alarm settings and warning messages.

## **Remote SYCLONE PC Spectral Analysis and Data Storage Software**

The SYCLONE is equipped with a high capacity internal memory that allows large amounts of data to be stored by record number, date and time. Stored data such as spectral and dose rate information can be easily downloaded to a PC via a mini USB or Bluetooth (optional). The downloaded data can then be displayed and managed with RadComm's exclusive RadView software. Primary features such as the selection and highlighting of Region Of Interest (R.O.I.) details and Zoom In/Out of the gamma energy histogram can be easily performed. The SYCLONE PC software has all the necessary features that will meet the needs of virtually any user.





#### Size

- Detector Dimensions: 5.9" H(15cm) x 8" L(20cm) x 3.75" W(9.5cm)
- System weight: 3.6lbs (1.6kg)
- Detector case: Durable plastic with protective silicone sleeve

#### **Electronics**

- Integral PMT with EM shielding
- High speed DSP circuitry with High SNR
- Ultra stable high voltage
- Software adjustable
- Mini USB port. Optional bluetooth
- Battery: Internal Lithium Ion rechargeable.
- Operating time: 8 hrs. Optional external battery pack

### Environmental

- Operating Temperature: -20°C (-4°F) to +60°C (140°F)
- Relative Humidity: 93% non-condensing at 40°C (104°F)
- Shock Resistance: Complies with ANSI N42.34
- EM Compliance: Complies with ANSI N42.34 and CE requirements for safety RFI and EMI directives FCC CFR47, Part 15, Subpart B, Class B compliant

## Display

- Backlit RGB color LCD 320x240 resolution
- Viewing area: 3.5"(8.9cm) TFT LCD

#### Software

- Windows<sup>™</sup> based Syclone application software
- Easy to use menu driven interface
- Configurable data storage with backup
- Emailing capability with network connection
- Data storage 100,000 Dose Rate samples/498 Spectra
- Data format complies with ANSI N42.42
- RadView software for integration



Corporate Head Office Scott Aikin Saikin@radcommsystems.com Jeff Adams jadams@radcommsystems.com 2931 Portland Drive Oakville, ON Canada L6H 5S4 Tel. +1 (905) 829-8290 Toll Free. 1 (800) 588-5229 Fax. +1 (905) 829-1406

#### USA


Joshua Hunter jhunter@radcommsystems.com 602 E. Lincolnway Ave. Valparaiso, IN USA 46383 Tel. +1 (773) 680-8430 Toll Free. 1 (800) 588-5229 Fax. +1 (219) 510-5764

Europe Wim van Hove wim.van.hove@radcommeurope.com Watertorenweg 32, 2230 Herselt, Belgium Tel. + 32.14.75.02.13 Fax. + 32.14.75.02.16

#### **Spectrometer Specifications**

- Gamma Nal Size 1.5" (38mm) x 2" (51mm)
- Geiger-Mueller, size 1.79"(45mm) x .48" (12mm)
- Energy Resolution 7.0% or better for 662 KeV
- Energy Range: 20 KeV to 3.0 MeV (Gamma)
- Optional Neutron Detector Sensitivity 5.1 CPS/NV
- System Calibration Software Monitor with Operator Alert
- Accumulate dose up to 5 Sv, custom increase
- Automatic stabilization via internal K-40
- Manual stabilization via 0.25 uCi Cs-137 source
- Gamma Spectrum 1024 Channels, channel capacity 16 bits
- Correction non-linear energy calibration
- Preset time up to 5400 sec.

### **RadView Analysis Software**

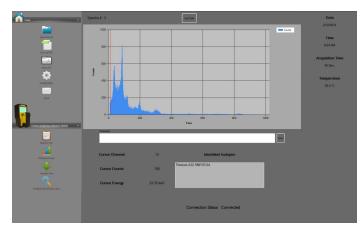

#### Black Sea

Osman Tureyyen metkim@metkim.com Kavacik, Onarimli Sokak No 9 Altay Han Daire: 8 Beykoz, Istanbul, Turkey Tel. +90 (216) 425-1412 Fax. +90 (216) 425-1432

Latin America Eduardo Ballesteros analiticacontrol@prodginy.net.mx Amatista No.27, El Pedregal Atizapan de Zaragoza, 52948, Estado De Mexico Tel. (52) 55 5077 4633/ (52) 55 3615 4910

#### India

Neelakshi Bhargava neelakshi@radcommsystems.co.in C-34, Ground Floor, Sawan Park, Ashok Vihar New Delhi 110052, India Tel. +91-9717671924 Fax. +91-9818650118